


Amplification *Taurus*

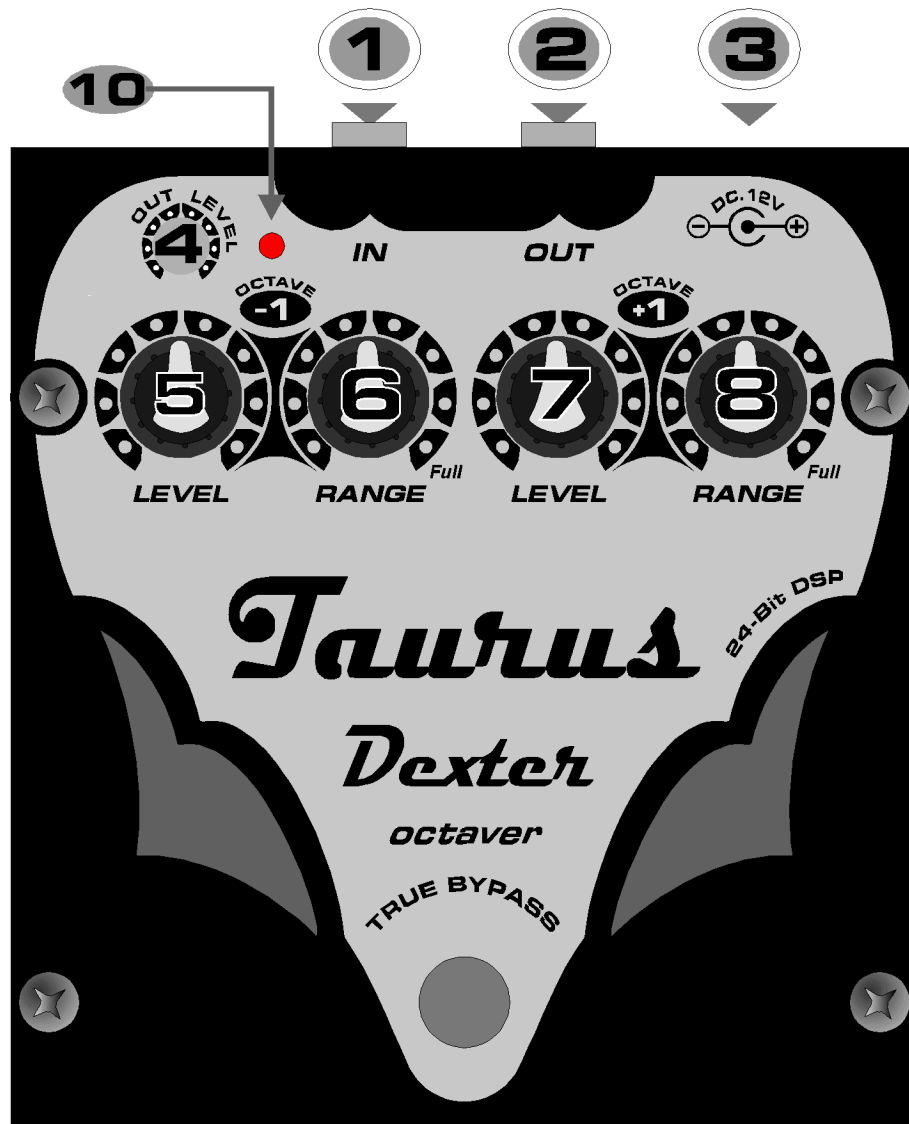

1. Input "mono-jack"
2. OUTPUT - "mono-jack"
3. POWER SUPPLY INPUT - (+)12V/150mA.
4. Adjusting the output signal level
5. LO-octave level adjustment.
6. LO-octave frequency range adjustment.
7. Hi-octave level adjustment.
8. Hi-octave frequency range adjustment.
9. FOOT SWITCH - true-bypass when on the "Off "position
10. LED - power indicator